


1. Interface Layout

Item	Description
A	USB Connector
B	Status Indicator
C	Reset Button

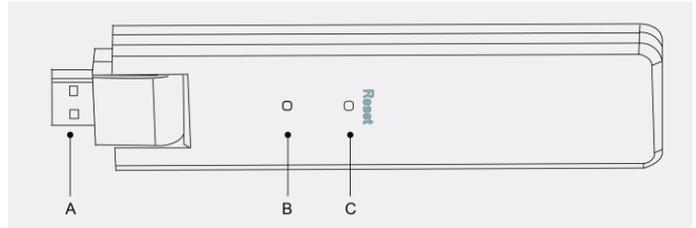

2. Preparation

A) Download the Hoymiles Mobile Installer App.




- B) Check the box for the following items:
- Hoymiles DTU-W100
 - Adapter


3. Installation

A) Power the DTU-W100 3rd Gen

Option 1: Connect the DTU to the adapter and plug it into the wall socket.

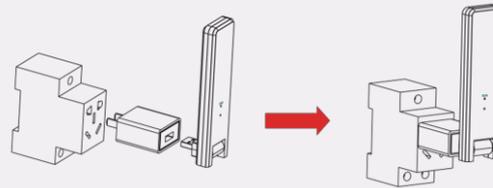

Option 2: Connect the DTU to the adapter and plug it into the power strip. Please make sure that it is placed at least 0.5 meters above the ground, and try to install the DTU at a 90 degrees angle perpendicular to the ground.

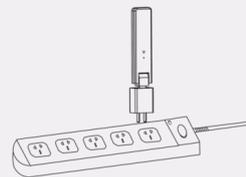


Note: Please do not install the DTU directly above metal or concrete to prevent signal interference.

B) Start Procedure.

Once the DTU powers on, the red, green and blue lights will flash in sequence for one second each for 30 seconds.

C) Set up with Internet.


Use the smartphone/tablet to open the Installer App and login. Locate "O&M" on the bottom of the page, select "Network Config", and then complete the Wi-Fi configuration.

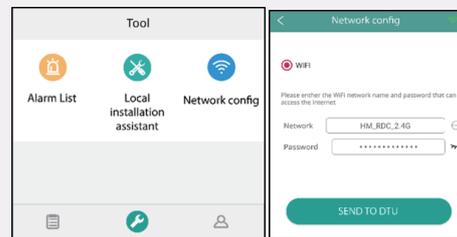

4. Installation Map

Complete the installation map.

A) Peel the serial number label (as circled below) from the DTU and place it on the installation map.

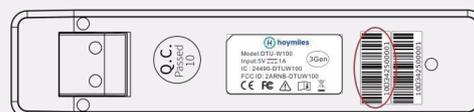

B) Complete the system information of the installation map as shown below.

Product Name		Model No.		Serial No.		Customer Information		DTU Serial Number		hoymiles			
1	2	3	4	5	6	7	8	9	10	11	12	13	14
A													
B													
C													
D													

5. Online Setup

Create an online account to complete the DTU installation (refer to “Quick Installation Guide for S-Miles Cloud (Hoymiles Monitoring Platform) Online Registration” for detailed account creation steps). *Note: For more setup details regarding the Local Installation Assistant, please acquire the related Operation Guide from Hoymiles Technical Service Center at service@hoymiles.com.*

6. Warning

Warning

- Only qualified personnel can install or replace the DTU.
- Do not attempt to repair the DTU, as it contains the parts that are not serviceable to users. If the DTU breaks down, please contact your distributor for maintenance. Opening the DTU without permission will invalidate the warranty.