

**Open Energy For All** 

# **Technical Note**

# Export Management Guide of Hoymiles Microinverter System

Version: V1.1 Region: Australia & New Zealand Release Date: 2023-01-18

hoymiles.com

# CONTENTS

1.	1. Introduction to Export Management			
2.	Те	rms	and Definitions	01
3.	In	stal	ing the Export Management System	02
4.	Di	spla	ying Web Pages	05
	4.1	Ove	view of "Power Station" Page	05
	4.2	Gen	erating Report	06
Ар	ben	dix	: Examples of Export Control	07
	Exa	ample	1: Zero Export Power Limit, Total Limit Mode	08
	Exa	ample	2: Zero Export Power Limit, Per Phase Limit Mode	09
	Exa	ample	3: 70% Export Power Limit, Total Limit Mode	10
	Exa	ample	4: 6 kW Export Power Limit, Per Phase Limit Mode	10
	Exa	ample	5: No Export Control, Displaying PV production and Load Consumption	11
Ар	ben	dix	II: Export Limit for Australia and New Zealand	12
Ар	ben	dix	III: How to Choose Meter for Your Export Management Station	15
	1	Mete	r Type	15
	2	Mete	r Application Under Different Grid Types	15
Ар	ben	dix	V: Meter installation	16
	1	Chin	t DDSU666 (100 A) Single-Phase Meter	16
		1.1	Meter Port Description	16
		1.2	Meter Installation	16
		1.3	Cable Connection (Single-Phase 220 V)	17
	2	Chin	t DTSU666 (100/250 A) Three-Phase Meter	19
		2.1	Meter Port Description	19
		2.2	Meter Installation	19
		2.3	Cable Connection(230/400 V Three-Phase Four-Wire )	20
Ар	ben	dix	/: Troubleshooting	22
Ар	ben	dix	/l : Meter Datasheets	23
	1	DDS	J666(CT-100 A)Datasheet	23
	2	DTS	J666(CT-3 × 100 A)Datasheet	24
	3	DTS	J666(CT-3 × 250 A)Datasheet	25

# 1 Introduction to Export Management

Local grid authorities in some countries limit the amount of power exported into the grid in order to lest power surges, power issues, or a drop in the quality of the electricity. This requirement has led Hoymiles to develop an Export Management Solution, which allows users to install larger PV systems without violating export laws.

Hoymiles Export Management works by installing the Hoymiles gateway DTU-Pro and the smart meter. The smart meter can be installed on the grid side or the load side to measure consumption or export. With export control enabled, DTU-Pro will adjust PV power generation to ensure that exported power does not exceed a pre-setting limit.

Note that users can also install the meter on the solar side for an accurate PV generation measurement. (Hoymiles export management cannot be enabled by only installing meters on the solar side.) In this case, Hoymiles DTU-Pro will collect the data and users will be able to view their power consumption on the Hoymiles monitoring platform.



# 2 Terms and Definitions

- **Consumption**: The power consumed by the local loads.
- Current Transformer (CT): A transformer fixed on the wiring to detect the current flow.
- **DTU**: DTU is the abbreviation for Data Transfer Unit. DTU receives data from the microinverter and meter, then uploads them to the monitoring platform.
- **Export**: Power exportation from the PV system to the grid.
- Grid Meter: A meter installed on the grid connection side that reads the power/energy exported to the grid.
- Load Meter: A meter installed on the load consumption side that reads the power/energy consumed by the local load.
- Meter: A device that measures the power flow.
- **Production**: The power produced by the PV microinverter system.
- **Solar Meter**: A meter installed at the output of microinverters that reads the power/energy produced by the PV microinverter system.

# 3 Installing the Export Management System

Please follow the instructions below to install the Hoymiles Export Management system. Before installation, please make sure that the export management function has been enabled on your plant. If it has been disabled, please consult your dealer or the Hoymiles technical support team.

#### Step 1: Choose an export control type.

- Zero Export: Sets the power export value to zero. The meter can be installed either on the load side or the grid side.
- Export Limit: Limit the export of power within a certain range. The meter can be installed either on the load side or the grid side.
- Production and Consumption Monitoring: Accurate display of the PV production and consumption. A meter should be installed on the load side or the grid side of the system in order to monitor consumption readings. The meter should also be installed on the solar side of the system in order to display PV production readings.

Note: Please refer to Appendix I for further information regarding Export Control.

# Step 2: Confirm the Grid type. (The grid type varies in different countries, please choose the right grid type accordingly.)

• Single-phase Grid 230 V: This is mainly for residential systems in most regions except North America and Latin America. The phase voltage may vary from 220 V to 240 V. The outputs of microinverters are connected between the live line (L1) and the neutral line (N).



• Three-phase Grid 230 V / 400 V: This is mainly for commercial systems in most regions except North America and Latin America. The phase voltage may vary from 220 V to 240 V. The outputs of microinverters are connected between the live line and neutral line (L1 and N, L2 and N, or L3 and N).



### Step 3: Verify the capacity of the loads before selecting the CT and meter type.

• The maximum load current or the maximum current of the PV system should not exceed the CT/Meter range regardless of where the meter is installed.

Note: Please refer to Appendix III for Meter and CT model selection.



Note: Please make sure the meter SN in one system is not repeated.

• For the export limitation function, only Chint meters purchased from Hoymiles are approved.

#### Step 4: Prepare the shielded twisted pair RS485 cable with a proper length.



- Step 5: Complete the wiring of the meter and CT according to the system requirements (please refer to Appendix III for more details).
- Step 6: Connect the A port of the meter to the A port of the DTU and the B port of the meter to the B port of the DTU by using an RS485 cable (please refer to Appendix III for more details).



Step 7: Connect the power cable to the DTU and power the DTU on.

#### Step 8: Complete the settings on the monitoring platform S-Miles Cloud.

a. Create a new station on the platform.

Enable Export Management?:

b. Switch on the slider button of "Enable Export Management".

© 2023 Hoymiles Power Electronics Inc. All rights reserved.

c. Select the Grid type.							
Grid Type							
Single-phase Grid 230V	O Three-phase Grid 230V/400V	Split-phase Grid 120V/240V	O Three-phase Grid 120V/208V				
N E	13 13 13						

d. Choose the installation location of the meter and enter the Meter SN.

*Note: Please make sure the meter SN in one system doesn't repeat.* 

S-MILES CLOUD	읍 Home	🖶 Plant	🗶 оам	🗟 Org & User	۹	0	٥	۲	8
Meter Location									
Load Meter A Enter the meter SN Grid Meter B Solar Meter C				Meter C Meter B					

e. Enable export management function by ticking the "**Export Power Limit**" box. Enter the limit value and click on "**Save**" to complete the station creation.

Export Control	
Export Management : 🔽	Export Power Limit
* Export Power Limit:	Enter KW
	Cancel Som 2

Note: There are two types of export control modes available for a three-phase system:

- Total: This applies to most settings. It controls the total export from the three phases. (E.g. Phase A =500 W, Phase B= -300 W, Phase C = -200 W, then the total power export is zero);
- Per Phase: Please refer to the grid requirements in your country. This mode means that power export on each phase is controlled. (E.g. Phase A = Phase B = Phase C = 0)

Note: For **Australia** and **New Zealand**, there are two types of export control mode, soft export limit control and hard export limit control. Please refer to **Appendix II** for more details.

f. For three-phase systems with single-phase microinverters, if the controlled export has been set to "**Per Phase**" mode, you must perform the "**Electrical Phase Separation**" after completing the Export Management setting.



Note: Please make sure the microinverters that are separated into each phase are matching with the actual installation condition.

# **4** Displaying Web Pages

# 4.1 Overview of "Power Station" Page



Plant Overview:

- Power Ratio: Real-time power of microinverter as a percentage of installed capacity
- Energy Today: Total energy generated
- Energy this Month: Energy generated in this month
- Lifetime Energy: Total energy generated up until now

Production & Consumption:

- Self-consumption: Energy consumption as a percentage of production
- Self-production: Energy production as a percentage of consumption
- Export: Energy exported to the grid

Note: These terms are used when the meter is installed on the grid side.

#### History Data:

- Production: Power generated from the PV system
- Consumption: Power used by the loads
- Import: Power imported from the grid
- Export: Power exported to the grid

*Note:* As a result of inconsistent timings obtained from meters and DTUs, PV-generated power can be higher than consumption. This situation will not affect the actual power limit.

# 4.2 Generating Report

You can generate the report by clicking on "**O&M**" > "Report **Query**".

命 / O&M / Report Query	
Report Query	
Power Report	Energy Report

# Appendix I: Examples of Export Control

The following examples illustrate how to use Export Control when you create an Export Management Station.

Before enabling the Export Management function, you must select a type of power distribution network from "Single-phase 230 V", "Three-phase 230 V / 400 V", "Split-phase 120 V / 240 V" and "Three-phase 120 V / 208 V". These four types generally cover major power grid types in most countries around the world. However, if there are three-phase microinverters installed at one site, only "Three-phase 230 V / 400 V" is available.

Grid Type				
Single-phase Grid 230V	Three-phase Grid 230V/400V	O Split-phase Grid 120V/240V	Three-phase Grid 120V/208V	
			لم الم الم الم الم الم الم الم الم الم ا	

Note that there are two Limit Modes available for "**Three-phase 230 V / 400 V**" in **Export Control** tab, namely **Total** and **Per Phase** limit mode, whereas only **Total** limit mode is available for the other three types.

Note: If there are three-phase microinverters installed at one site, only the Total Limit Mode will be available.

#### • Total:

The total export power is calculated by subtracting the combined load consumption from the combined PV production. Export power in one phase can compensate for import power in another phase.

Export Control		
Export Management:	<ul> <li>Export Power Limit</li> </ul>	
Limit Mode:	Total V	
* Export Power Limit:	Enter kW	

• Per Phase (Only for three-phase 230 V / 400 V PV system):

If you choose "**Three-phase Grid 230 V / 400 V**" as your grid type, the outputs of PV microinverters are connected to phase voltage. In this case, you should select **Per Phase** as your limit mode and specify a limit value for each phase. Each phase's export power will be limited to the pre-setting value shown in the following figure. The total export power is the sum of the production minus the consumption of each phase.

Export Control			
	Export Management:	<ul> <li>Export Power Limit</li> </ul>	
	Limit Mode:	Per Phase	$\overline{}$
	* Export Power Limit Value (Phase A):	Enter	κW
	* Export Power Limit Value (Phase B):	Enter	¢W
	* Export Power Limit Value (Phase C):	Enter	κW

In the following examples, twelve Hoymiles HM-1500 4-in-1 microinverters are connected to a three-phase system. As part of this system, the phase voltage is 230 V, the maximum continuous AC output power is 18 kW, the total output power of all PV modules is 20 kW, and each phase is equipped with four microinverters with a maximum AC power of 6 kW each. Each example shows how exported power and solar power are affected under different conditions.

Here, a "Three-phase 230 V / 400 V" power distribution network is selected under the Grid Type tab.



# Example 1: Zero Export Power Limit, Total Limit Mode

This example sets the export power limit of the entire PV system to zero and enables Total Limit Mode.

#### Case 1

If the total PV production is lower than the load consumption, all loads are powered from the PV production and the grid. There is no power export to the grid in this case, so PV production will not be limited.

	Phase 1 (kW)	Phase 2 (kW)	Phase 3 (kW)	Total (kW)
Ideal PV Production	2	2	2	6
Load Consumption	4	3	2	9
Actual PV Production	2	2	2	6
Export	-2	-1	0	-3

Note: The "-2" indicates that 2kW of power is imported from the grid and no energy is fed into the grid.

#### Case 2

If the PV production exceeds load consumption in one phase, but is lower in the other two phases, and the total PV production is lower than the total load consumption, then the PV production will not be limited in the Total Limit Mode.

	Phase 1 (kW)	Phase 2 (kW)	Phase 3 (kW)	Total (kW)
Ideal PV Production	3	3	3	9
Load Consumption	4	3	2	9
Actual PV Production	3	3	3	9
Export	-1	0	1	0 (zero export)

#### Case 3

If total PV Production is higher than the total load consumption, all the phases' PV production will be limited.

	Phase 1 (kW)	Phase 2 (kW)	Phase 3 (kW)	Total (kW)
Ideal PV Production	4	4	4	12
Load Consumption	4	3	2	9
Actual PV Production	3	3	3	9
Export	-1	0	1	0 (zero export)

# Example 2: Zero Export Power Limit, Per Phase Limit Mode

In this example, the export power limit of the whole PV system is set to zero and the Per Phase Limit Mode is enabled.

#### Case 1

When PV production of all phases is lower than load consumption, all phases' loads are powered from PV production and the grid. No power will be exported to the grid, therefore PV production will not be restricted.

	Phase 1 (kW)	Phase 2 (kW)	Phase 3 (kW)	Total (kW)
Ideal PV Production	2	2	2	6
Load Consumption	4	3	2	9
Actual PV Production	2	2	2	6
Export	-2	-1	0	-3 (zero export)

*Note: The "-3" indicates that 3kW of power is imported from the grid and no energy is fed into the grid.* 

#### Case 2

If the PV production of one phase is higher than the load consumption, the PV production of this phase will be limited in the Per Phase Limit Mode.

	Phase 1 (kW)	Phase 2 (kW)	Phase 3 (kW)	Total (kW)
Ideal PV Production	3	3	3	9
Load Consumption	4	3	2	9
Actual PV Production	3	3	2	8
Export	-1	0	0	-1 (zero export)

#### Case 3

In the event that the PV production of any phase exceeds the corresponding load consumption, the PV production will be limited.

	Phase 1 (kW)	Phase 2 (kW)	Phase 3 (kW)	Total (kW)
Ideal PV Production	4	4	4	12
Load Consumption	4	3	2	9
Actual PV Production	ctual PV Production 4	3	2	9
Export	0	0	0	0 (zero export)

# Example 3: 70% Export Power Limit, Total Limit Mode

In Germany, based on the Renewable Energy Sources Act (EEG) 2012, PV systems with a capacity from 0.8 kW to 30 kW are limited to feeding a maximum of 70% of their installed capacity into the grid in the total limit mode at the point of common coupling.

For example, if the output power of a PV system is 20 kW, then the export power limit should be 20 kW × 70% = 14 kW.

#### Case 1

If the total PV production is lower than the load consumption, or higher than the load consumption but no more than 70% of its installed capacity, the PV production will not be limited.

	Phase 1 (kW)	Phase 2 (kW)	Phase 3 (kW)	Total (kW)
Ideal PV Production	5	4	3	12
Load Consumption	4	3	2	9
Actual PV Production	5	4	3	12
Export	1	1	1	3

*Note:* 3 kW is lower than 70% of 12 kW, so the PV production will not be limited.

#### Case 2

If the total load consumption is too low, and the Actual PV Production exceeds 70% of the Ideal PV Production, then the PV production will be limited.

	Phase 1 (kW)	Phase 2 (kW)	Phase 3 (kW)	Total (kW)
Ideal PV Production	5	5	5	15
Load Consumption	3	0	0	3
Actual PV Production	4.5	4.5	4.5	13.5
Export	1.5	4.5	4.5	10.5

#### Note:

*Given the above situation, the export management function has been operating, so the power export is limited to 10.5 kW, which is 70% of 15 kW.* 

# Example 4: 6 kW Export Power Limit, Per Phase Limit Mode

In this example, the export power limit is set to 6 kW, and the phase power limit is set to 2 kW.

#### Case 1

In the case that the PV production of every phase is lower than the corresponding load consumption or higher than the load consumption but the excess power is not greater than 2 kW, the PV production will not be limited.

	Phase 1 (kW)	Phase 2 (kW)	Phase 3 (kW)	Total (kW)
Ideal PV Production	5	4	3	12
Load Consumption	4	3	2	9
Actual PV Production	5	4	3	12
Export	1	1	1	3

#### Case 2

In the **Per Phase, Total Limit** mode, PV production will be limited if the PV production of any phase exceeds the load consumption by 2 kW or more.

	Phase 1 (kW)	Phase 2 (kW)	Phase 3 (kW)	Total (kW)
Ideal PV Production	3	4	5	12
Load Consumption	2	2	2	6
Actual PV Production	3	4	4	11
Export	1	2	2	5

# Example 5: No Export Control, Displaying the PV Production and Load Consumption

There are some users who do not require the export management function, but only wish to view the PV production and load consumption on the Hoymiles Monitoring Platform. It is the same procedure as setting up the export management function, except that the "Export Power Limit" should be disabled in the module "Export Control".

Export Control	
	Export Management: Export Power Limit

# Appendix II: Export Limit for Australia and New Zealand

The standard AS/NZS 4777.2:2020 specifies some compliance requirements for the inverter or multiple inverter combination, for example, the export limit control should includes two types, soft limit and hard limit. Hoymiles Microinverter system in grid tied mode can work in these two configurations.

#### • Soft Export Limit:

In the soft export limit control mode, when the soft limit is exceeded, the export limit control function shall operate to reduce the power output of the inverter or multiple inverter combination such that the export limit of the electrical installation is met within 15 s.

#### • Hard Export Limit:

In the hard export limit control mode, when the hard limit is exceeded, the export limit control function shall operate to disconnect the inverter or each inverter within the multiple inverter combination within 2 s.

In Hoymiles export management system, users can choose soft export limit control or soft + hard export limit control and enter the soft export limit or hard export limit value manually. But, it should be noted that the soft limit is **required** in the PV system, while the hard limit is an **option**. Users should choose the right export control mode according to the local regulations.

Please follow the steps below to complete configutrations of these two limit control modes in single-phase and three-phase PV system.

#### 1 Single-phase System

1. Navigate to the setting page. In the **Grid Type** tab, select the **Single-phase 230 V**. Then follow the on-screen instructions to complete the smart meters' configuration.

Grid Type     Single-phase Grid 230V	Three-phase Grid 230V/400V	Split-phase Grid 120V/240V	Three-phase Grid 120V/208V
·	Creen and and a second se		
Meter Location			
Load Meter A		Meter C	Meter B
Grid Meter B			
Solar Meter C		Meter A	

#### • Soft Export Limit

2. In the **Export Control** tab, tick on the **Soft Export Limit Control**, then enter the value in the **Soft Export Power Limit** blank.

Export Control		
	Export Management: 🗹 Soft Export Limit Control 🗌 Soft + Hard Export Limit Control	1
*!	Soft Export Power Limit: 0.5 kW	2
	Cancel Save 3	

#### • Soft + Hard Export Limit

2. In the **Export Control** tab, tick on the **Soft + Hard Export Limit Control**, then enter the value in the **Soft Export Power Limit** blank and **Hard Export Power Limit** blank.

Export Control	Export Management: Soft Export Limit Control 🔽 Soft + Hard Export Limit Control	1
	* Soft Export Power Limit: 0.5 kW	
	* Hard Export Power Limit: 1 kW	<b>Z</b>
		-
	Cancel Save 3	

### 2 Three-phase System

1. Navigate to the setting page. In the **Grid Type** tab, select the **Single-phase 230 V**. Then follow the on-screen instructions to complete the smart meters' configuration.

Single-phase Grid 230V	Three-phase Grid 230V/400V	Split-phase Grid 120V/240V	Three-phase Grid 120V/208V
Meter Location Load Meter A Grid Meter B 10C Solar Meter C 10C	2	Meter C MCCO NYTETE	Meter B

#### • Soft Export Limit, Total Mode

2. In the **Export Control** tab, tick on the **Soft Export Limit Control**. Select the **Total** mode from the drop-down list, then enter the value in the **Soft Export Power Limit** blank.

Export Control					
	Export Management :	Soft Export Limit Control	Soft + Hard Export Limit Control	1	
	Limit Mode :	Total	×	<u> </u>	
	* Soft Export Power Limit:	0.5	kW	3	
			Л		
		Cancel	4		

#### Soft Export Limit, Per Phase Mode

2. In the **Export Control** tab, tick on the **Soft Export Limit Control**. Select the **Per Phase** mode from the drop-down list, then enter the value in the three **Soft Export Power Limit** blanks respectively.

Export Control						
	Export Management :	Soft Export Limit Continues	rol 🗌 Soft + Hard	Export Limit Control	_ 1	
	Limit Mode:	Per Phase	~			
,	* Soft Export Power Limit (Phase A) :	0.5	kW		2	
	* Soft Export Power Limit (Phase B) :	0.5	kW	3		
,	* Soft Export Power Limit (Phase C) :	0.5	kW			
		Cancel Save	4			

#### • Soft + Hard Export Limit, Total Mode

2. In the **Export Control** tab, tick on the **Soft + Hard Export Limit Control**. Select the **Total** mode from the drop-down list, then enter the value in the **Soft Export Power Limit** blank and **Hard Export Power Limit** blank respectively.

* Soft Export Power Limit: 0.5 kW	Z
* Hard Export Power Limit: 1 kW	

#### • Soft + Hard Export Limit, Per Phase Mode

2. In the **Export Control** tab, tick on the **Soft + Hard Export Limit Control**. Select the **Per Phase** mode from the drop-down list, then enter the value in the three **Soft Export Power Limit** and two **Hard Export Limit Control** blanks respectively.

Limit Mode :	Per Phase	×			
* Soft Export Power Limit (Phase A) :	0.5	kW		4	
* Soft Export Power Limit (Phase B) :	0.5	kW	3		
* Soft Export Power Limit (Phase C) :	0.5	kW			
<sup>،</sup> Hard Export Power Limit (Phase A) :	1	kW			
* Hard Export Power Limit (Phase B) :	1	kW	4		
* Hard Export Power Limit (Phase C) :	1	kW			

# Appendix III: How to Choose Meter for Your Export Management Station

Based on the actual installation requirements, users can choose from three types of combination meters.

# 1 Meter Type

Meter Model	Туре	SN	Description
DDSU666 (CT-100 A)	Single Phase	10C015XXXXX	With 1 x 100 A CT
DTSU666(CT-3 × 100 A)	Three Phase	10C016XXXXXX	With 3 x 100 A CT
DTSU666(CT-3 × 250 A)	Three Phase	10C017XXXXX	With 3 x 250 A CT

# 2 Meter Application Under Different Grid Types

Grid Type	Applicable Meter Type
Single Phase System (230 V)	DDSU666 (100 A)
Three Phase System (230 V / 400 V)	DTSU666 (3 × 100 A) DTSU666 (3 × 250 A)

# **Appendix IV : Meter installation**

- 1 Chint DDSU666 (100 A) Single-phase Meter
  - **1.1 Meter Port Description**



- Port 3: connect to the L line
- Port 4: connect to the N line
- Port 5: connect to the white wire (I \* ) from CT
- Port 6: connect to the blue wire (I) from CT
- Port 24: connect to the RS485A of the DTU
- Port 25: connect to the RS485B of the DTU

#### 1.2 Meter Installation

Please follow the steps listed below to fit the meter on the standard din rail of DIN35mm:

- 1. Attach the meter to the standard din rail from the top to the bottom.
- 2. Press the meter onto the din rail from the bottom to the front part.



#### 1.3 Cable Connection (Single-Phase 220 V)



# 1. Wire the L and N cable to the corresponding port 3 and port 4 of the meter respectively. *Note:*

The selected cable shall meet local cable standards for the minimum wire diameter.

#### 2. Wire the CT outlets I\* and I to the corresponding port 5 and port 6 of the CT respectively.

#### 3. Install the CT in place according to the wiring diagram.

Note:

- CTs are directional. Check that I\* and I connections are correct as per wiring diagram. If the I\* (white) and I (blue) are swapped at the meter, the measured power will be negative.
- Be sure to install the CT with the arrow (printed on the shell of the CT) facing towards the current source. Otherwise, there will be incorrect power measurements and problems with the meter.



The following diagram illustrates different types of CT installation:

- Position A: Meter has been installed on the Load side and the CT arrow is pointed to the Loads.
- Position B: Meter has been installed on the Grid side and the CT arrow is pointed to the Grid.
- Position C: Meter has been installed on the PV side and the CT arrow is pointed to the Grid.



4、Connect RS485A and RS485B to DTU. The picture below shows the RS485A and RS485B on DTU.



#### Scenario 1:

When there is only one DTU in a system, and the RS485 cable length exceeds 200 meters, Hoymiles recommends shorting jumpers on the two Ports on the left of the RS485 port.



#### Scenario 2:

When there are multiple DTUs in one system, connect the DTUs one by one (as shown in the diagram below). If the distance between the microinverter and the final DTU exceeds 200 meters, a short jumper will be recommended for the final two RS485 ports on the final DTU.



# 2 Chint DTSU666 (100/250 A) Three-Phase Meter

# 2.1 Meter Port Description



Port 3: connect to the L line from Phase A Port 6: connect to the L line from Phase B Port 9: connect to the L line from Phase C Port 10: connect to the N line from Grid Port 13: connect to the white wire from CT for IA\* Port 14: connect to the blue wire from CT for IB Port 16: connect to the white wire from CT for IB Port 17: connect to the blue wire from CT for IB Port 19: connect to the blue wire from CT for IC Port 21: connect to the blue wire from CT for IC Port 24: connect to the RS485A of the DTU Port 25: connect to the RS485B of the DTU

### 2.2 Meter Installation

Please follow the steps listed below to fit the meter on the standard din rail of DIN35mm:

- 1. Attach the meter to the standard din rail from the top to the bottom.
- 2. Press the meter onto the din rail from the bottom to the front part.



# 2.3 Cable Connection (230/400 V Three-Phase Four-Wire System)



1. Wire the Ua, Ub, Uc, Un cable to the corresponding port 3, port 6, port 9, and port 10 of the meter respectively.

#### Note:

The selected cable shall meet local cable standards for the minimum wire diameter.

2. Wire the CT outlets IA\*, IA, IB\*, IB, IC\*, IC cable to the corresponding port 13, port 14, port 16, port 17,port 19,and port 21 of the CT respectively.

#### 3. Install the CT in place according to the wiring diagram.

Note:

- CTs are directional. Check that I\* and I connections are correct as per wiring diagram. If the I\* (white) and I (blue) are swapped at the meter, the measured power will be negative.
- Be sure to install the CT with the arrow (printed on the shell of the CT) facing towards the current source. Otherwise, there will be incorrect power measurements and problems with the meter.



The following diagram illustrates different types of CT installation:

- Position A: Meter has been installed on the Load side and the CT arrow is pointed to the Loads.
- Position B: Meter has been installed on the Grid side and the CT arrow is pointed to the Grid.
- Position C: Meter has been installed on the PV side and the CT arrow is pointed to the Grid.



4. Connect RS485A and RS485B to DTU. The picture below shows the RS485A and RS485B on DTU.



#### Scenario 1:

When there is only one DTU in a system, and the RS485 cable length exceeds 200 meters, Hoymiles recommends shorting jumpers on the two Ports on the left of the RS485 port.



#### Scenario 2:

When there are multiple DTUs in one system, connect the DTUs one by one (as shown in the diagram below). If the distance between the microinverter and the final DTU exceeds 200 meters, a short jumper will be recommended for the final two RS485 ports on the final DTU.



# Appendix V: Troubleshooting

Fault phenomenon	Reason analysis	Elimination
No display when powered on	1. Incorrect wiring. 2. Abnormal voltage for the instrument.	<ol> <li>If it is wrongly connected, please reconnect based on the correct wiring mode (see the wiring diagram).</li> <li>If the supplied voltage is abnormal, please choose the specified voltage.</li> <li>If not the above problems, please contact with the local supplier.</li> </ol>
Abnormal RS485 communication	<ol> <li>RS485 communication cable is opened, short circuit or reversely connected.</li> <li>Address, baud rate, data bit and check bit are not in accordance with the host computer.</li> <li>The end of RS485 communication cable has not been matched with resistance (when the distance is over 100 meters)</li> <li>Not matched with the communication protocol order of the host computer.</li> </ol>	1. If there is any problem with the communication cable, please change it. 2. Set the address, baud rate, data bit and check bit through buttons and confirm it is the same as the host computer, then set the operation to "parameter settings". 3. If the communication distance is over 100 meters, and the communication parameter settings are the same as the host computer, but cannot be communicated, then please lower the baud rate or add a resistance of $120\Omega$ at the start Port and ending Port
Inaccurate for energy metering	<ol> <li>Incorrect wiring, please check whether the corresponding phase sequence of voltage and current is correct.</li> <li>Check whether the high &amp; low end of current transformer inlet is reversely connected. Please observe the power of Pa, Pb, Pc, to be abnormal if there are any negative values.</li> </ol>	If the wiring mode is incorrect, please connect based on the correct wiring mode (see the wiring diagram).
Abnormal data for the electrical parameter (voltage, current, power, etc.)	<ol> <li>The transformer's ratio hasn't been set, and the instrument displays the secondary side data.</li> <li>Wrong wiring.</li> </ol>	<ol> <li>If setting the transformer ratio, please set the voltage and current ratios based on "parameter setting."</li> <li>If wrongly connected, please connect the voltage and current of phase A, B and C to the wiring Port of the instrument.</li> </ol>
Abnormal data for the electrical parameter read by communication (voltage, current, power, etc.)	<ol> <li>Data read by communication is secondary side data without transformer ratio.</li> <li>Wrong analysis for data frame.</li> </ol>	<ol> <li>Multiply the data read by communication with the voltage and current ratios.</li> <li>Analyze the data frame based on the communication protocol format; please pay attention to the mode of the big and small ends of data.</li> </ol>

# **Appendix VI : Meter Datasheets**

# 1 DDSU666 (CT-100 A) Datasheet

Electrical Data				
Model	DDSU666 New-Via-CT-100 A			
Referenced Voltage	230 V			
Limiting operating voltage rang	e 0. 7 Un to 1.3 Un			
Current Specification	100 A / 40 mA			
Rated temperature	-25°C to +55°C			
Туре	Transformer Access			
Mechanical Data				
Dimensions (W x H x D)	36 × 100 × 65 mm			
DIN Type	35 mm			
Power factor	Current value	Percent error limit of Each level meter		
1	$0.02~In \leq~I \leq 0.05~In$	±1.5		
1	$0.05~In \leq~I \leq Imax$	±1.0		
0.5L	$0.05 \text{ In} \leq \text{ I} \leq \text{ 0.1 In}$	±1.5		
0.8C	0.1 In $\leq$ I $\leq$ Imax	±1.0		

Note:

- In: secondary rated current of the current transformer
- L: inductive
- C: capacitive





# 2 DTSU666 (CT-3 × 100 A) Datasheet

Electrical Data				
Model	DTSU666New-Via-CT-3 ×100A			
Referenced Voltage	3 × 230/400 V or 3 × 400 V			
Limiting operating voltage range	0. 7 Un to 1.15 Un			
Current Specification	100 A / 40 mA			
Rated temperature	-25°C to +70°C			
Туре	Transformer Access			
Mechanical Data				
Dimensions (W x H x D)	72 × 100 × 65 mm			
DIN Type	35 mm			
Power factor	Current value	Percent error limit of Each level meter		
1	0.01 In $\leq$ I $<$ 0.05 In	±1.5		
	0.05 In $\leq$ I $\leq$ I max	±1.0		
0.5 L	0.02 In $\leq$ I $<$ 0.1 In	±1.5		
0.8 C	0.1 In $\leq I \leq I$ max	±1.0		

#### Note:

- In: secondary rated current of the current transformer
- L: inductive
- C: capacitive





# 3 DTSU666 (CT-3 × 250 A) Datasheet

Electrical Data				
Model	DTSU666New-Via-CT-3 × 250 A			
Referenced Voltage	3 × 230/400 V or 3 × 400 V			
Limiting operating voltage range	0. 7 Un to 1.15 Un			
Current Specification	250 A / 50 mA			
Rated temperature	-25°C to +70°C			
Туре	Transformer Access			
Mechanical Data				
Dimensions (W x H x D)	72 × 100 × 65 mm			
DIN Type	35 mm			
Power factor	Current value	Percent error limit of Each level meter		
1	0.01 In $\le$ I $<$ 0.05 In	±1.5		
	$0.05~In \leq I \leq I~max$	±1.0		
0.5L	0.02 In $\le$ I $<$ 0.1 In	±1.5		
0.8C	0.1 In $\leq$ I $\leq$ I max	±1.0		

Note:

• In: secondary rated current of the current transformer

• L: inductive

• C: capacitive

